



## Настройки НТ-10 (Preamble – Barcode – Postamble)

### 1. Set All Default

-  - Start Configuration
-  - Set All Default
-  - End Configuration

### 2. Preamble: STX

-  - Start Configuration
-  - Preamble
-  0  2 - Character “**STX**”
-  - Confirm
-  - End Configuration