

M3 T

Quick Manual Ver.1.3



PACKAGE


- Please check all items below are included in package box.




< M3 T >




< Cradle >

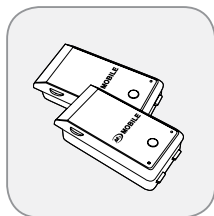

< Battery >

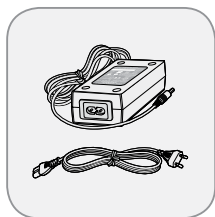

< Adaptor >

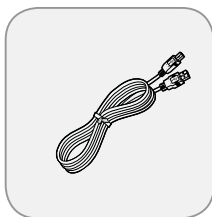

< USB cable >




< Stylus pen >

※ Warning


Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

DEVICE



< 1D Scanner >

Barcode Scan Window



< 2D Imager >



Ear-Phone Connector

Camera Button


Scanner Button

Battery Lock


Camera

Battery

Keypad

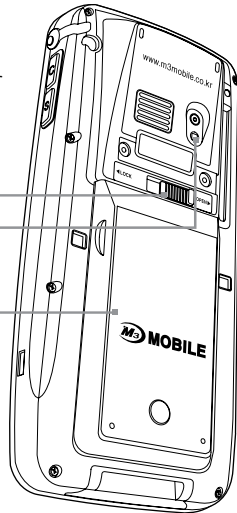


Charging &
USB/Serial Port

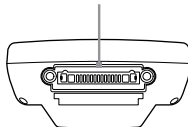

FEATURES


KEYPAD

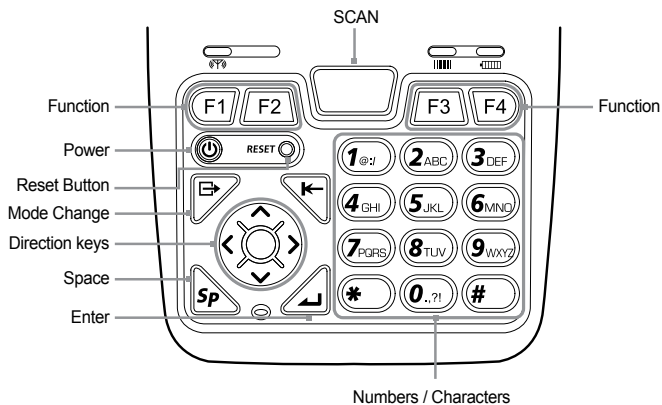

SOFT RESET

When an unexpected error occurs while using the device, SOFT RESET allows your device to restart, similar to rebooting a computer. It will adjust memory allocation - all records and entries are retained after soft reset but unsaved data or files may be lost.


- Press the RESET BUTTON briefly.

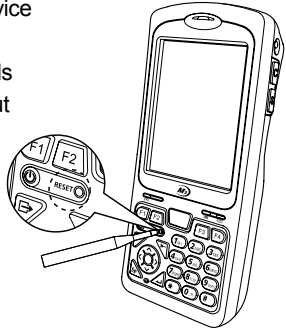

HARD RESET

When an unexpected error cannot be solved with SOFT RESET, perform HARD RESET to restart the system. It will erase all data stored in the device except in Flash Disk and return to its default settings.


- Press the RESET BUTTON more than 5 seconds.

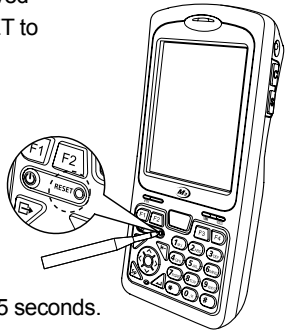

CARD INSTALLATION

Micro SD Card Installation



- Remove the battery from the battery pack.
- Insert the Micro SD Card as shown in the left picture.
- Check whether it is installed properly.

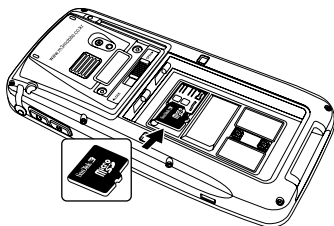

BATTERY



Inserting Battery

- Insert the battery to the battery pack position.
- Slide the battery lock to the left to lock the battery pack.

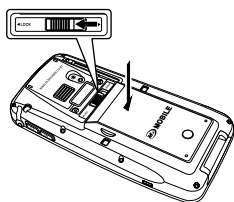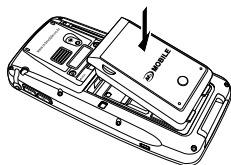

Removing Battery

- Slide the battery lock to the right to unlock the battery pack.
- Then remove the battery from the battery position.

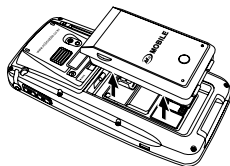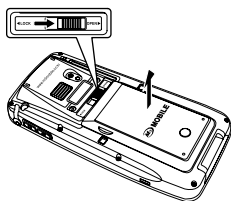

※ Warning

Risk of Explosion if Battery is replaced by an Incorrect Type. Dispose of Used Batteries According to the Instructions.

CHARGING

How to charge



- Supply power to the cradle using the AC charger.
- Insert the PDA to device slot to start charging the PDA.

Charging status

Charging status of the PDA and the spare battery is indicated by LEDs.

LED charging indicator on the cradle indicates the charging status of the spare battery.

LED on right side in the middle of the device indicates the charging status of the battery attached.

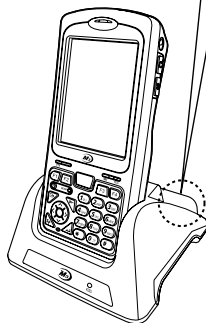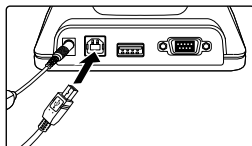


Battery attached to the PDA	LED color	Spare battery
The battery is being charged.	RED	The spare battery is being charged.
The battery is fully charged.	GREEN	The spare battery is fully charged.

SCANNER

Scanning

- Launch the Scanner program (either ScanEmul or M3ScanTest).
- Press the SCAN BUTTON toward barcode to read.

Make sure the laser beam covered whole barcode to read data properly.



O



X

Imaging

- Launch the Scanner program.
- Press the SCAN BUTTON toward barcode to read.

Make sure the laser beam covered whole barcode to read data properly.



O



X

※ Warning

LASER LIGHT - Do not stare into beam, CLASS 2 LASER PRODUCT
1.0mW, MAX OUTPUT:650nm

CAMERA

Taking pictures

- Run the Camera program.
- Tab the Camera icon to take a picture.
- Taken pictures are stored in Photo folder.
(My Device\Flash Disk\Camera\Photo)

* Video function is not supported in M3 T.

※ Warning

It may cause significant damage to your eyes if you directly look the flash attached at camera module.

SYNCHRONIZE with YOUR PC

Please download the ActiveSync from Microsoft webpage to activesync with PC.

ActiveSync :

<http://www.microsoft.com/downloads/en/details.aspx?FamilyID=9e641c34-6f7f-404d-a04b-dc09f8141141>

Windows Mobile Device Center (Windows Vista and 7) :

<http://www.microsoft.com/windowsphone/en-us/howto/wp6/sync/installing-wmdc.aspx>

Should you require any services or technical support on M3 Mobile's products, contact your supplier or visit M3 Mobile technical support webpage <http://support.m3mobile.co.kr>. Desired or relevant manuals can be downloaded from Manuals or FAQ in technical support webpage.

User manual, especially, is included in Flash Disk so that M3 T users can obtain it from the Flash Disk as well.

For DOA or RMA, please send the defective product to suitable address AFTER consulting the supplier.



Headquarter/Service Center

M3 bldg., 735-45,
Yeoksam-Dong, Gangnam-gu,
Seoul, 135-080, Korea
Tel : +82 2 574 0037
Fax : +82 2 558 1253
www.m3mobile.co.kr
sales@m3mobile.co.kr

Production Center

Chun-ui Techno Park 201-610,
202, Chun-ui Dong, Won-Mi gu,
Buchoen, Gyeonggi Do,
420-857, Korea
Tel: +82 32 623 0030
Fax: +82 32 623 0035